


SAFETY CABLE INSTALLATION

INSTALL THE SAFETY CABLE:

Locate the stud closest to the center of the bed, and attach one end of the cable to the back rail near the stud with the $\frac{3}{4}$ " screw provided. Leaving about a three inch loop in the cable as shown, attach the other end to the wall stud with the 2" washer head screw about one inch higher than the rail top.

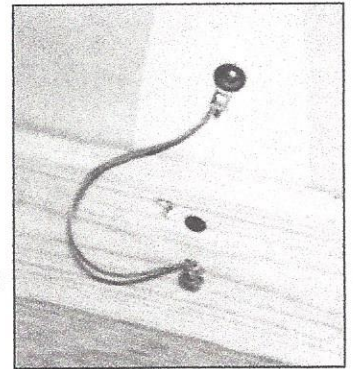

SAFETY CABLE

This screw, when properly driven into the stud, should be fairly hard to drive. If it is not, you may have missed the stud and should try again. *The function of this cable is to make attachment failure of the bed visible by allowing it to come away from the wall, two or three inches. When you see this condition DO NOT OPEN THE BED! You **must** investigate what is wrong and correct it!*

Your Wallbed! should now be in location. Visually check the alignment of the mattress tray and cabinet by looking at the narrow space between the mattress tray and sides, to see that the tray will not be rubbing either side panel. To correct alignment, just nudge the base of the cabinet slightly to either side. When alignment is correct, hold the bed open, reach in underneath, and drive a 2 $\frac{1}{2}$ " screw through the frame backrail into the wall or floor, as you choose. This will keep the cabinet from shifting offline with use.